

BOTLEY 2.0



- Quick Start Instructions
- Coding Instructions
- Remote Programmer Instructions
- Troubleshooting Guide
- Care & Maintenance Tips

Using the Remote Programmer

You can program Botley using the Remote Programmer. Press these buttons to enter commands, then press TRANSMIT.

FORWARD (F)
Botley moves forward 1 step (approximately 8", depending on the surface).

TURN LEFT 45 DEGREES (L45)
Botley will rotate to the left 45 degrees.

LOOP
Press to repeat a step or sequence of steps.

OBJECT DETECTION
Press to enable object detection.

TURN LEFT (L)
Botley will rotate to the left 90 degrees.

BACK (B)
Botley moves backward 1 step.

TRANSMIT
Press to send your code from the Remote Programmer to Botley.

TURN RIGHT 45 DEGREES (R45)
Botley will rotate to the right.

LIGHT
Press to customize Botley's light color. Each press of the LIGHT button selects a new color!


SOUND
Press to toggle between 3 sound settings: High, Low, and Off.

CLEAR
Press once to clear the last programmed step. Press and hold to clear all previously programmed steps.

Botley 2.0 User Guide



Botley 2.0 Activities

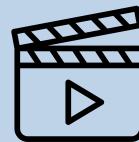

Botley 2.0 Video Tutorial

BECKER'S

in partnership with

