

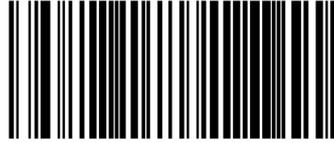
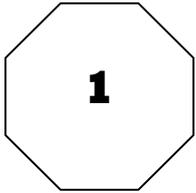


Gryphon Barcode Scanner Configuration Sheet


NOTE: Use this configuration sheet to properly configure Gryphon scanners with model numbers 4100 & 4130 to function with Destiny. Scan the following barcodes in sequential order (1-5). Ensure that your computer monitor is displaying the desktop and that NO software programs are open.

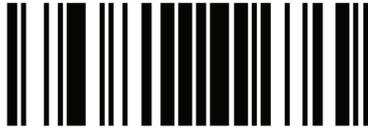



Restore USA Factory Configuration

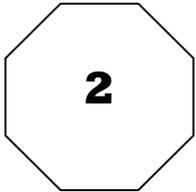



ENTER/EXIT PROGRAMMING MODE

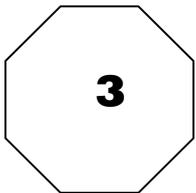

EAN-13 ISBN Conversion = Convert to ISBN

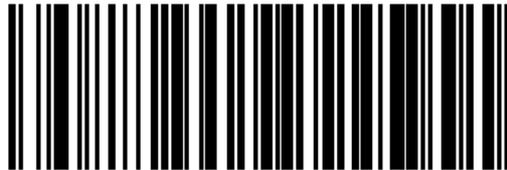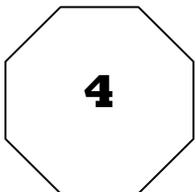

Scan Mode = Stand Mode^c

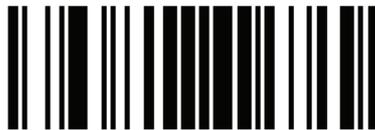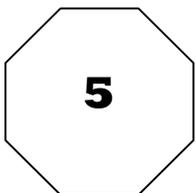

ENTER/EXIT PROGRAMMING MODE