



## Emergency Radio (**Replaces Base Station\*\***) at Schools Guide

### SCHOOLS EMERGENCY RADIO

#### **Accessing the Emergency Radio:**

1. Press the Home button.
2. Select Schools.
3. Choose Dispatch 1.

#### **Channel Descriptions:**

- **Dispatch 1 (Channel 1):** Communicates directly with the LASPD (Los Angeles School Police Department) dispatcher.
- **Dispatch 2 (Channel 2):** Also connects to LASPD, but on a secondary dispatch line.

**Important Notes for Campus Radio Tests:** To ensure your assigned school site can reach LASPD Dispatch:

1. Use the charged Emergency Radio located in the Main Office.
2. Confirm the radio is set to the correct Zone and either Channel 1 or 2, displaying Dispatch 1 or Dispatch 2 on the screen.

\*Channel

Selector Knob

\*Volume Knob

\*Push-to-Talk  
Button (PTT)

\*Zone Button

**\*Home Button**

\*Radio Antenna

\*Information  
Displays



### Radio Charger



### Power Cable





## Emergency Radio (***Replaces Base Station\*\****) at Schools Guide

### EMERGENCY HANDHELD RADIO INSTRUCTIONS

#### Channel 1 – School Police Channel (DISPATCH 1)

- **Purpose:** Communicates directly with the LASPD Dispatch Center.
- **Usage:** Use this channel during emergencies or drills.
- **Location:** The emergency handheld radio is in the Main Office.

#### Channel 2 – School Police Channel (DISPATCH 2)

- **Purpose:** Connects with School Police Dispatch 2.
- **Usage:** Use this channel for direct communication with School Police.

#### Battery Charging Instructions

- Always charge the radio **with the power turned On**.
- A full charge provides **10hours** of battery life.




CHANNEL SELECT  
KNOB

ON/OFF & VOLUME  
CONTROL KNOB



PUSH-to-TALK  
(PTT) BUTTON

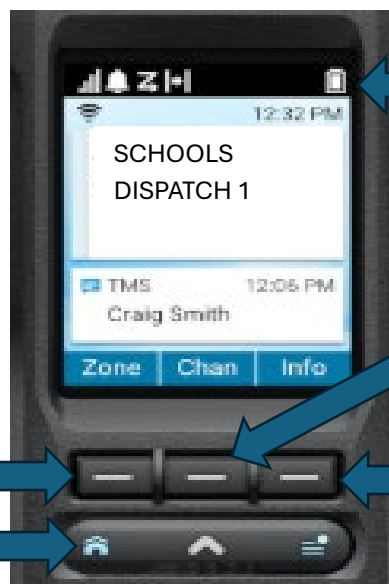

BATTERY STATUS

CHANNEL SELECT BUTTON

ZONE BUTTON

RADIO INFORMATION

HOME BUTTON